

BE2022
BELLMAN & SYMFON AB
ENGLISH

BE2022 Maxi Pro TV streamer



About the TV streamer

The Maxi Pro TV streamer enables you to hear the television at a volume that suits you, without affecting the volume for anyone else in the room. It streams the sound in full stereo via Bluetooth to your Maxi Pro personal amplifier.

What's in the box

Along with the TV streamer, the following items are included:

A mini-stereo cable



A mini-stereo-to-RCA adapter



A fiber optic cable

 


A DC-connector-to-USB cord



A power adapter


(Your plug may look different)

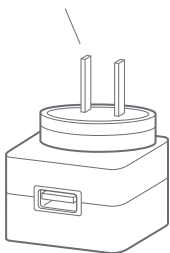

What you need to get started

To set up your TV streamer, you also need:

 A TV with an RCA, headphone or optical audio port

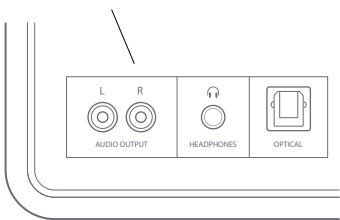

A Maxi Pro personal amplifier



Setting up the TV streamer

 
Step 1: Connecting audio

There are several ways to connect the TV streamer to your TV. It depends on what type of audio ports your TV has.

Using the TV's RCA output

- 1 Connect one end of the mini-stereo cable to the audio input on the back of the TV streamer.
- 2 Connect the other end to the mini-stereo-to-RCA adapter.
- 3 Connect the RCA plugs to the audio output on your TV.

Note: You can also connect the mini-stereo cable directly to the headphone output on your TV. Please note that this may mute the speakers on some TV models.

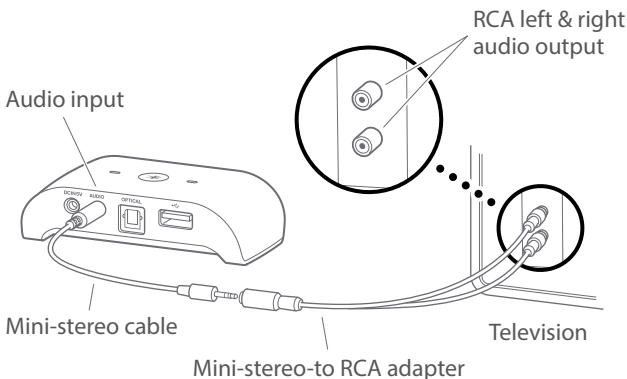


Using the TV's optical output

If your TV features an optical output, you can use the fiber optic cable to connect the TV streamer to your TV. Here is how you connect it:

- 1 Connect one end of the cable to the optical input on the back of the TV streamer.
- 2 Connect the other end to the optical output on your TV.

 
Fiber optic cable

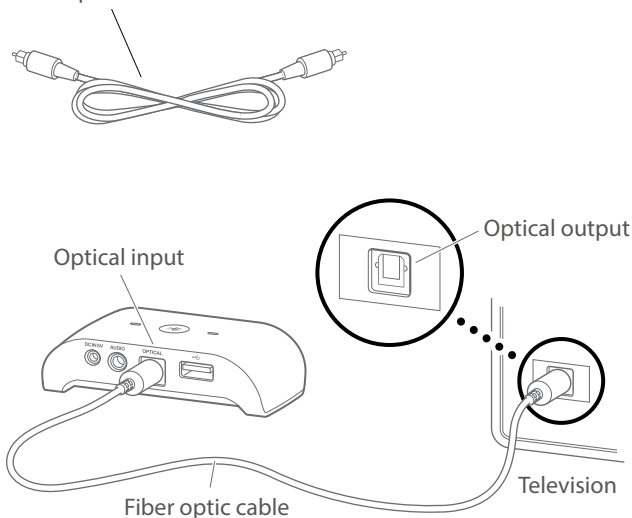

Step 2: Connecting the power cord

- 1 Connect the DC plug to the power input on the back of the TV streamer.
- 2 Connect the USB plug to the power adapter.
- 3 Fit the adapter plug to the power adapter and check that it is properly locked before connecting it to the power outlet. The power indicator on the TV streamer lights up in green.

 Note: You can power your TV streamer from your TV by connecting the USB plug directly to a USB output on your TV.

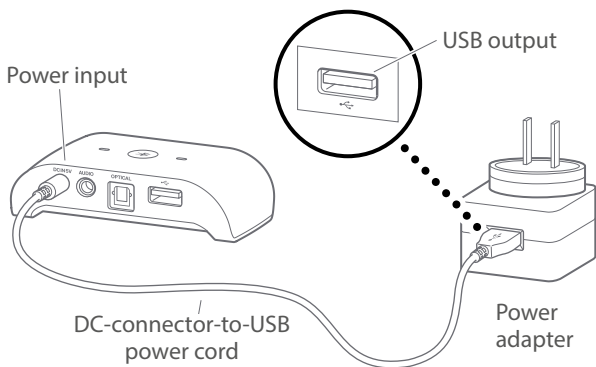

Step 3: Pairing

Note: If the TV streamer came with your Maxi, you don't need to pair the units.

- 1 **On the TV streamer:** Press and hold the Bluetooth button until the Bluetooth indicator starts to blink in blue.
- 2 **On your Maxi:** Press the microphone selector. Press and hold the Bluetooth selector until the Bluetooth indicator starts to blink in blue.
- 3 Both Bluetooth indicators will emit a steady blue light to show that the pairing was successful.

Using your TV streamer

Turning it on

 
- 1 The TV streamer starts automatically when you connect it to power and the power indicator lights up in green to show that it's on.
- 2 During start-up, the TV streamer will automatically connect to your Maxi Pro. Both Bluetooth indicators will light up in blue to show that the units are connected.

Note: As long as your TV streamer is connected to power, it will remain on and automatically reconnect to your Maxi Pro when it returns within Bluetooth range.

Charging your Maxi Pro

You can charge your Maxi Pro from the TV streamer.

- 1 Connect the USB end of the Maxi charging cable to the USB charging output on the back of the TV streamer.
- 2 Connect the other end to the Maxi charger jack.
- 3 The Maxi battery indicator blinks in green during charging.

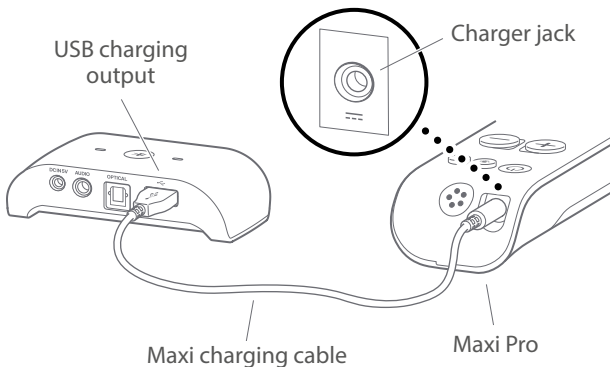

Troubleshooting

If	Try this
Nothing happens when I press the TV streamer Bluetooth button.	<ul style="list-style-type: none">• Make sure that the TV streamer is connected to power, see Connecting the power cord.
I don't hear the sound of the TV in my headphones.	<ul style="list-style-type: none">• Make sure Maxi Pro is within range and paired with your TV streamer, see Pairing.
The TV sound disappears when I connect the mini-stereo cable to the headphones output.	<ul style="list-style-type: none">• This is a feature on some TV models. Use the RCA or optical output on your TV instead, see Connecting audio.

Care and maintenance

Operate the product in a dry environment where the temperature is always between 0° and 35° C.

Clean the product with a soft, lint-free cloth. Avoid getting moisture in openings. Don't use window cleaners, household cleaners, solvents, alcohol, ammonia, or abrasives.

If the product appears to be damaged or doesn't function properly, follow the instructions in this leaflet. If the product still doesn't function as intended, contact your local dealer for information on service and warranty.

European office

Bellman & Symfon AB
Sodra Langebergsgatan 30
436 32 Askim, Sweden
Phone +46 31 68 28 20
E-mail info@bellman.com



bellman.com